


CRAFTSMAN
19.2 Volt Cordless Drill
Model No. 113450
Repair Sheet

**CRAFTSMAN 3/8 INCH, 19.2 VOLT CORDLESS DRILL-DRIVER
MODEL NUMBER 113450**


The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **3/8 INCH CORDLESS DRILL-DRIVER** or when ordering repair parts.

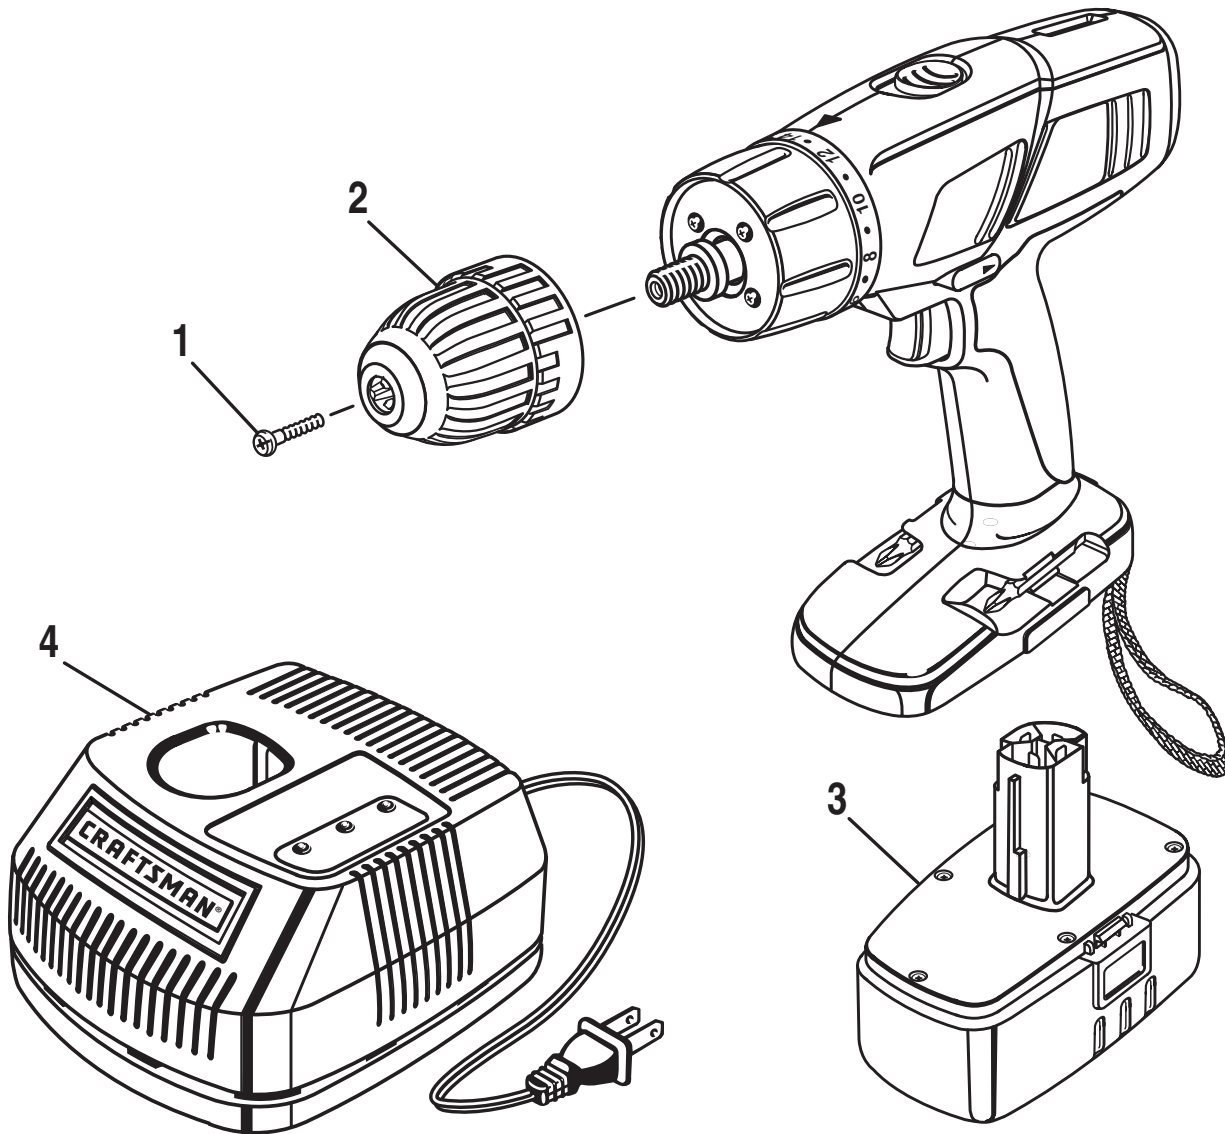

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	616478003	Screw (Special)	1
2	6903304	Chuck	1
3	Item No. 9 11375	Battery Pack (1310715).....	1
4	Item No. 9 11041	Charger (1425301).....	1
5	3063626	11315 Combo Kit Carrying Case – Not Shown	1
	9021110	11348 Combo Kit Tool Bag – Not Shown	1

CRAFTSMAN 3/8 INCH, 19.2 VOLT CORDLESS DRILL-DRIVER - MODEL NUMBER 113450

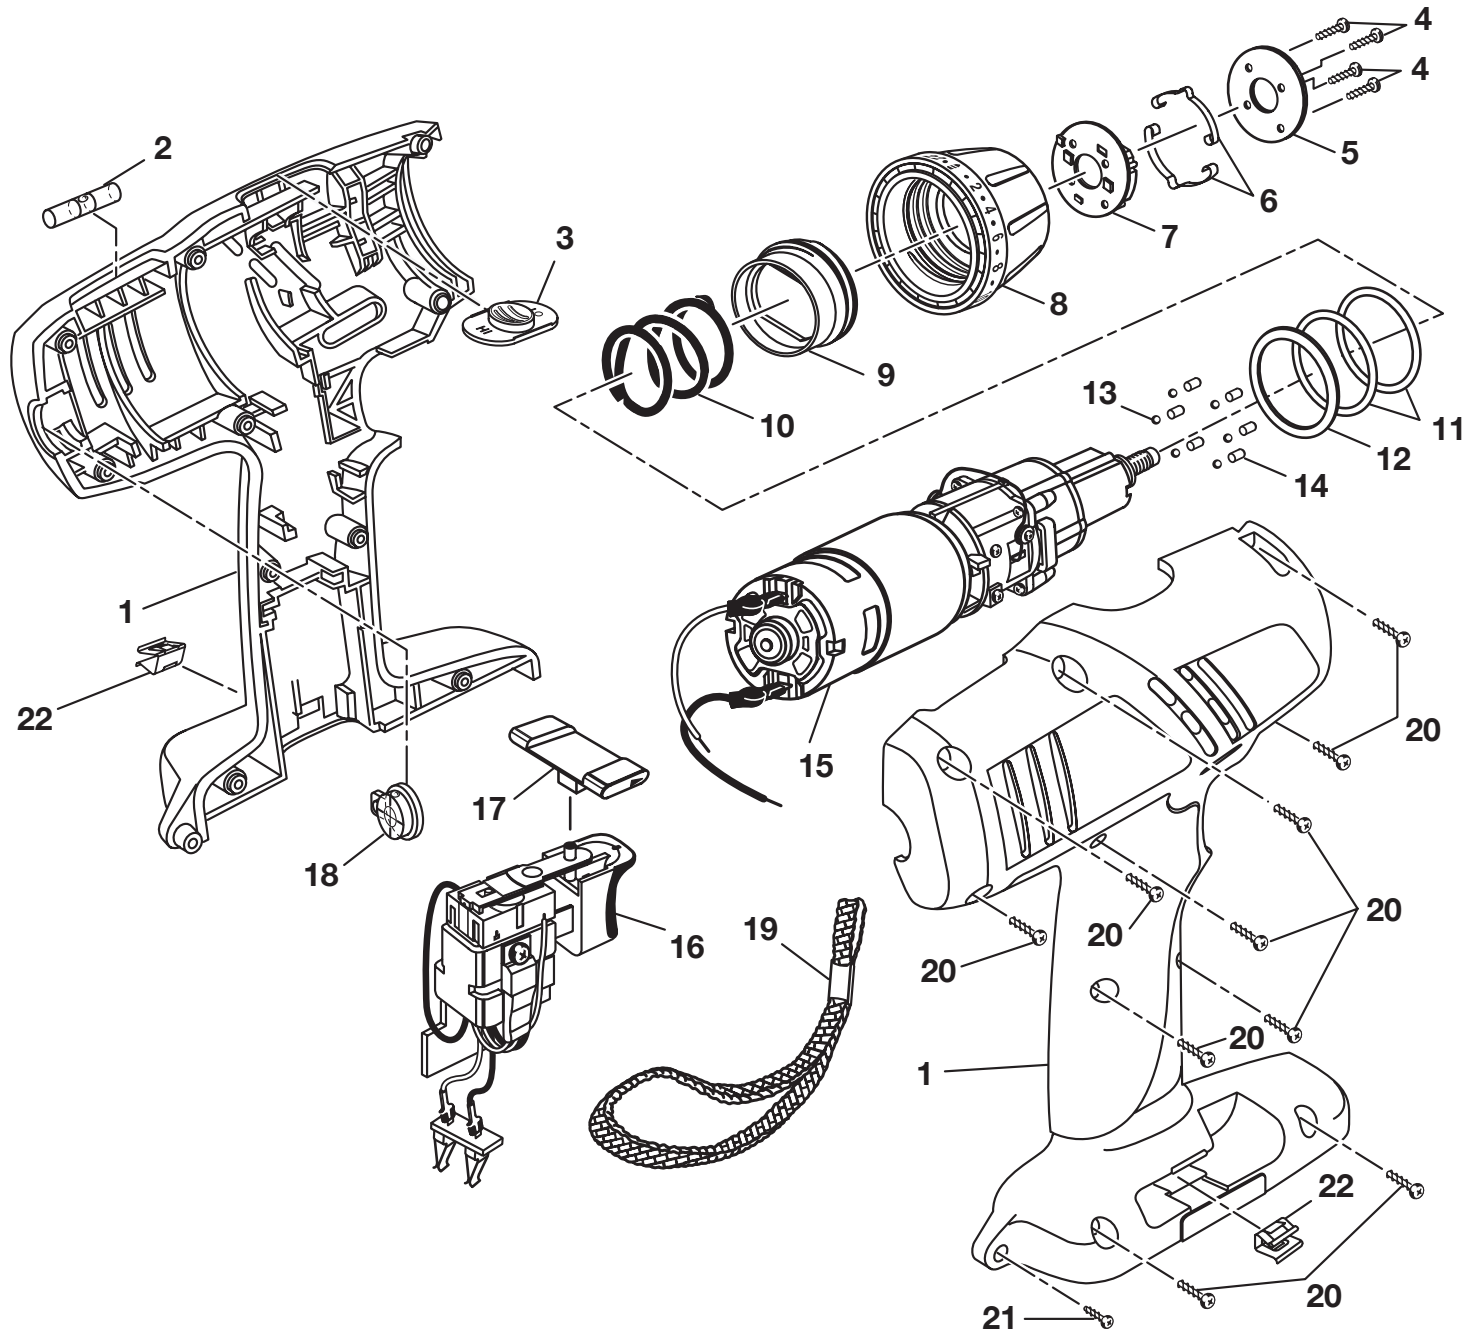


CRAFTSMAN 3/8 INCH, 19.2 VOLT CORDLESS DRILL-DRIVER – MODEL NUMBER 113450

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **3/8 INCH CORDLESS DRILL-DRIVER** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	983343001	Housing Assembly	1
2	3000909	Top Level.....	1
3	540352003	Gear Change Button	1
4	6620311	Screw (M3.5 x 20 mm)	4
5	6359801	Mounting Plate	1
6	6399201	Spring Plate.....	2
7	5434601	Spring Holder	1
8	4011801	Clutch Cap	1
9	5437201	Sleeve.....	1
10	6843401	Spring.....	1
11	6711101	Washer	2
12	6838001	Clutch Washer.....	1
13	6721901	Steel Ball	6
14	6833802	Pin	6
15	983342001	Motor w/Gear Train and Clutch.....	1
16	2701239	Switch Assembly.....	1
17	540340006	Forward-Reverse Actuator.....	1
18	3048003	Rear Level	1
19	9002724	Wrist Strap	1
20	6620805	Screw (M4 x 16 mm)	10
21	6622306	Screw (M3.5 x 11 mm)	1
22	630206007	Bit Clip.....	2
	983000001	Operator's Manual	
	2-26-13 (REV:03)		

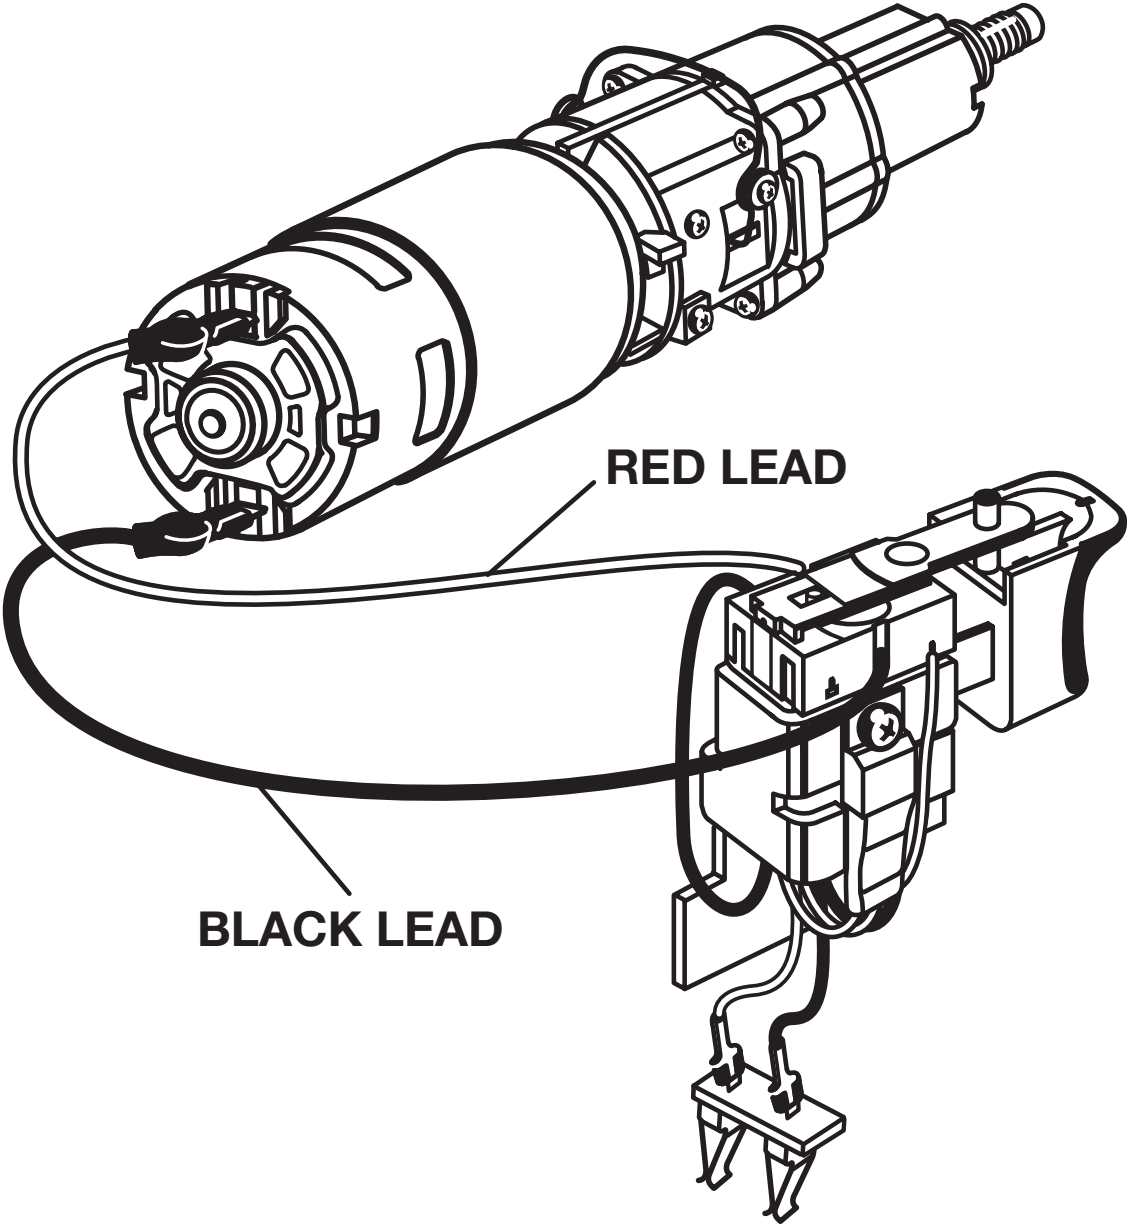

RED LEAD

BLACK LEAD

WIRING DIAGRAM